

Please give copies to all Technical Bulletin

Subject: Procedure After Restoring Electrical Power

Group: 01

Number: 99-15

Model(s): AII 1999➤

Date: Aug 25, 1999

Supersedes T.B. Group 01 Number 99-12 Dated July 22, 1999

Superseded due to addition of Labor Operation on Page 2

Service

When electrical power has been restored etc. after the battery has been disconnected, perform adaptation / reset items listed below to ensure proper vehicle function.

WARNING!

Disconnect battery Ground (GND) strap before working on electrical system. Ensure there is no person inside vehicle when connecting battery Ground (GND) strap.

Note:

- ◆ The following procedures are abbreviated. if necessary, complete instructions can be found in the appropriate Repair Manuals.
- ◆ For vehicles equipped with Immobilizer, the Key code is maintained when power is interrupted for any reason. Therefore, recoding the key/instrument cluster is not required.
- Check all systems for stored DTC's.
- Make appropriate repairs, if necessary.
- Clear DTC memory, if DTC's were found.
- Set engine basic settings (Electronic Throttle Control Adaptation).
- Set transmission basic settings.
- Set Climatronic, power window, and power seat adaptation.

(Cont. on Page 2)

<u>C 01-99-15</u> <u>1</u>



Please give copies to all Technical Bulletin

Perform the following as necessary:

- Check Readiness code and set.
- Reset clock and radio anti-theft code.

When procedure applies to vehicles within the New Vehicle Limited Warranty, use the following:

Part Identifier: 2700

Labor Operation: 2700713 30TU

C 01-99-15