Please give copies to all Technical Bulletin

Subject: Airbag units, replacing following deployment Group: 69

Number: 99-02

Model(s): All 1990 â 2000 Date: June 17, 1999

Service

Wiring harnesses in seat for airbag must be replaced if airbag unit in seat is deployed. The list below summarizes all components that must be replaced following airbag deployment.

Always replace the following:

- " All triggered airbag units
- " All control modules for triggered airbags
- " All sensors for triggered airbags
- " All seat belts with triggered belt tensioners
- Support for front passenger airbag unit, if unit is triggered
- Airbag spiral spring / Return spring with slip ring -F138- for driver's airbag, if unit is triggered
- All airbag wiring harnesses for side airbag in seat, if unit is triggered
- Seat cover and cover clips, if side airbag is triggered
- " Visually check and replace: All damaged components

Note:

When replacing either an airbag unit or airbag control module, see your parts department for proper registration procedure.