

Please give copies to all Technical Bulletin

Subject: Heating and Ventilation Controls, Replacing Fresh Air Group: 85

Control Lever Light -L16-


Number: 99-02

Model(s): All with Manual Heating/Ventilation 1998 ➤ 2000 Date: Dec. 9, 1999

Controls

Supersedes T.B. Group 85 number 99-01 dated Mar. 26, 1999

Superseded due to Part Number addition.

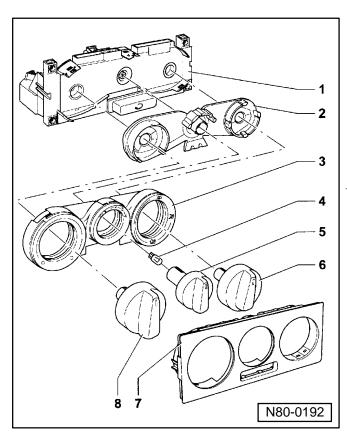

Condition

Heating and ventilation control assemblies replaced due to inoperative fresh air control lever light -L16-.

Service

DO NOT replace entire control assembly. Replace lever light as follows:

- Remove fan speed control knob -5- using pliers with suitable plastic or rubber protection on jaws (note position of knob).
 - Remove bulb -4- using a piece of rubber hose approx. 4mm inner dia. (press hose onto bulb far enough to grip bulb and remove).
 - Install new bulb Part No: N 017 751 2 (press into hose only slightly, then install into bulb socket).

CAUTION!

Part numbers are for reference only. Always check with your Parts Dept. for the latest parts information.

- Turn on vehicle lights and check operation of bulb.
- Reinstall fan speed control knob -5- in same position as removed (check operation).

Note:

Heating and ventilation control assemblies replaced for inoperative fresh air control lever light will NOT be approved for Warranty reimbursement.