



**DANGER**


**Danger of electrical shock, burns or death.** Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



**CAUTION**

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.




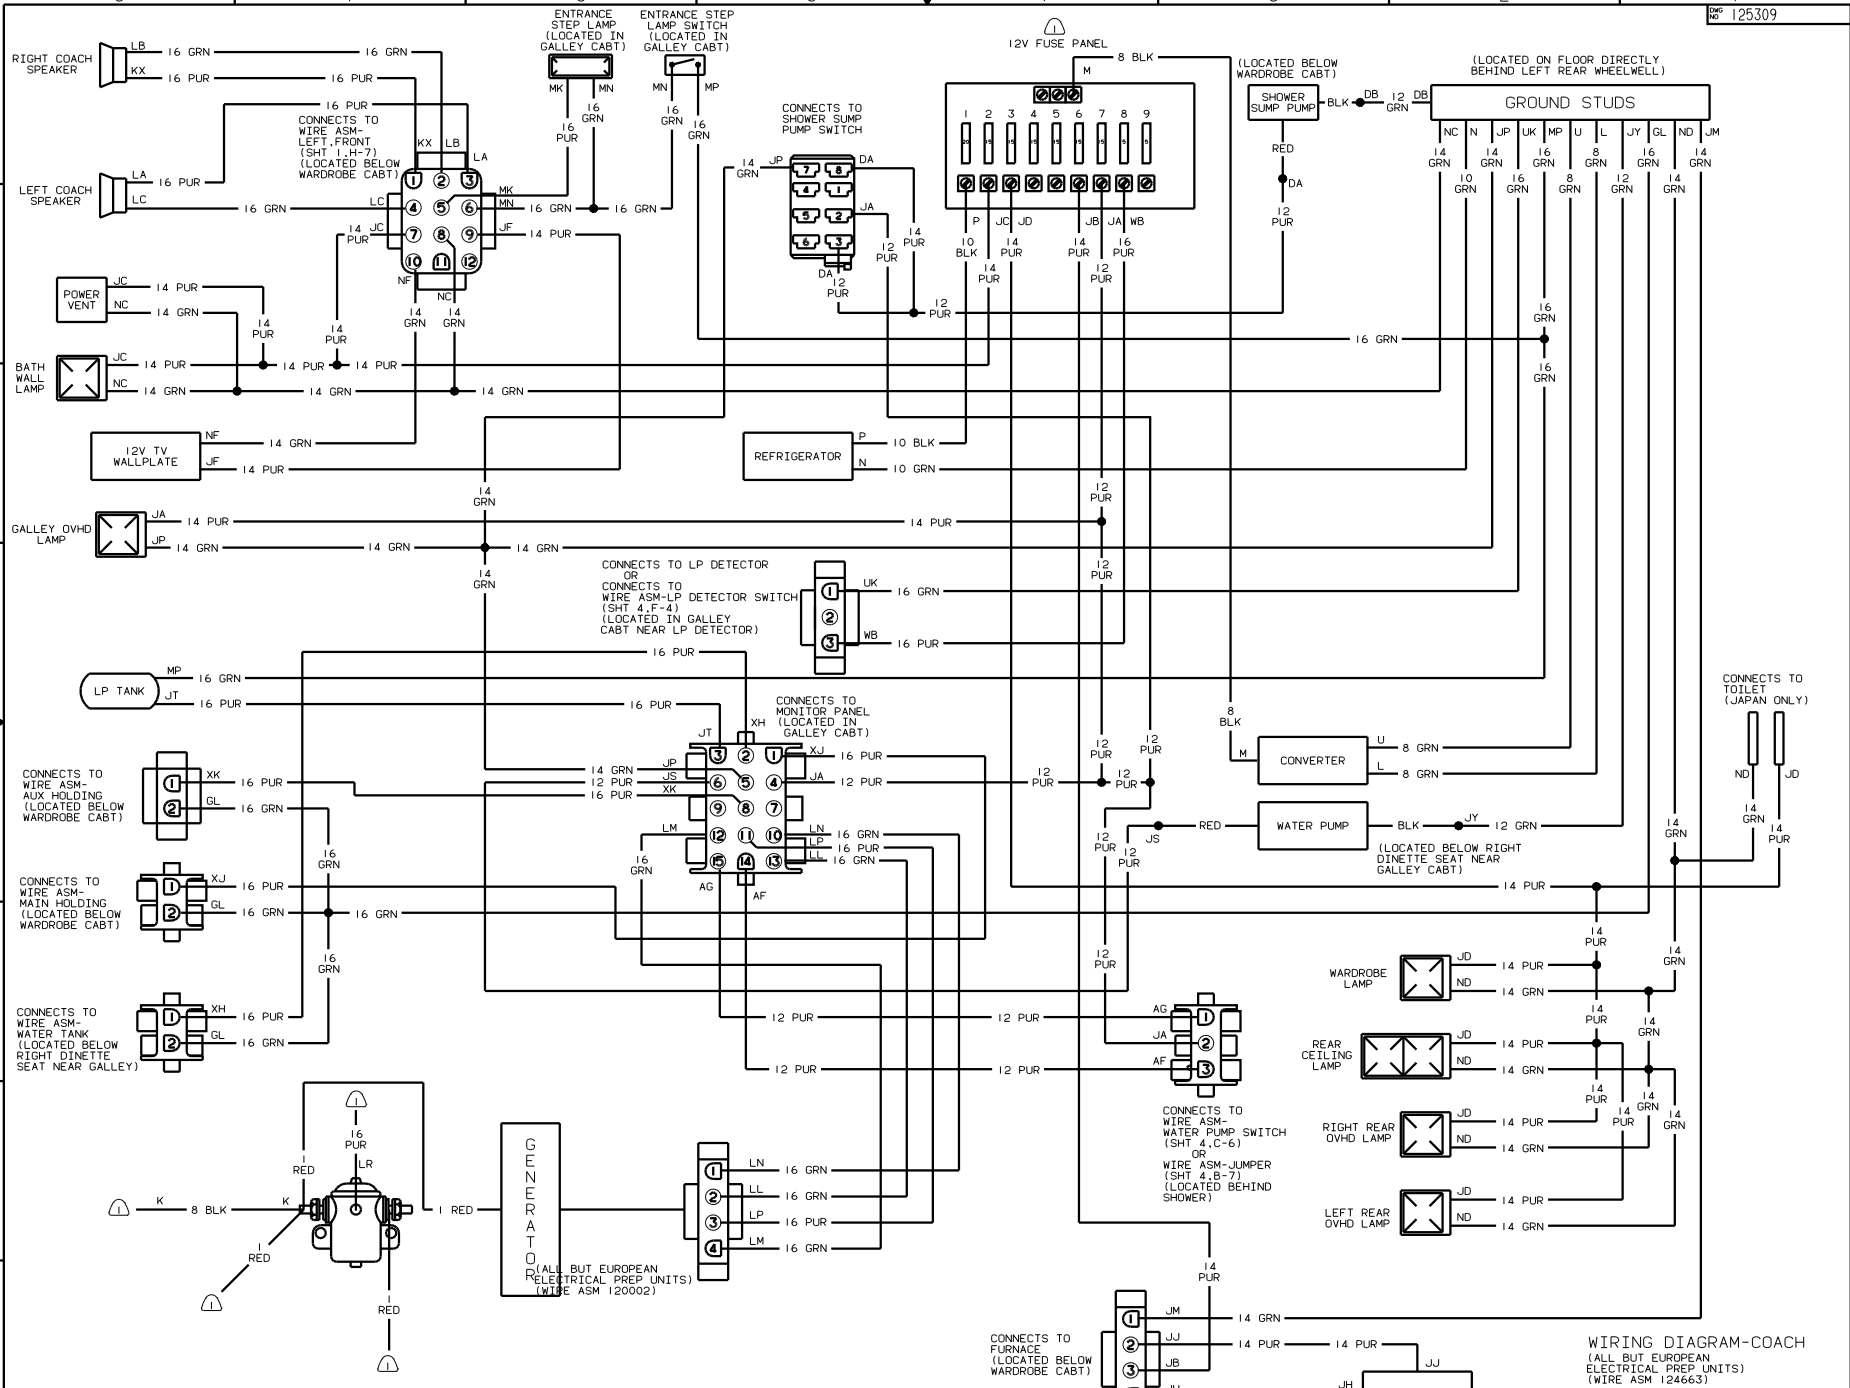

NOTES: SEE SHIT 1 FOR ADDITIONAL INFORMATION.

WIRING DIAGRAM-COACH  
(ALL BUT EUROPEAN ELECTRICAL PREP UNITS)  
(WIRE ASM 124663)

WIRING DIAGRAM-BODY  
SHEET 2 OF 6

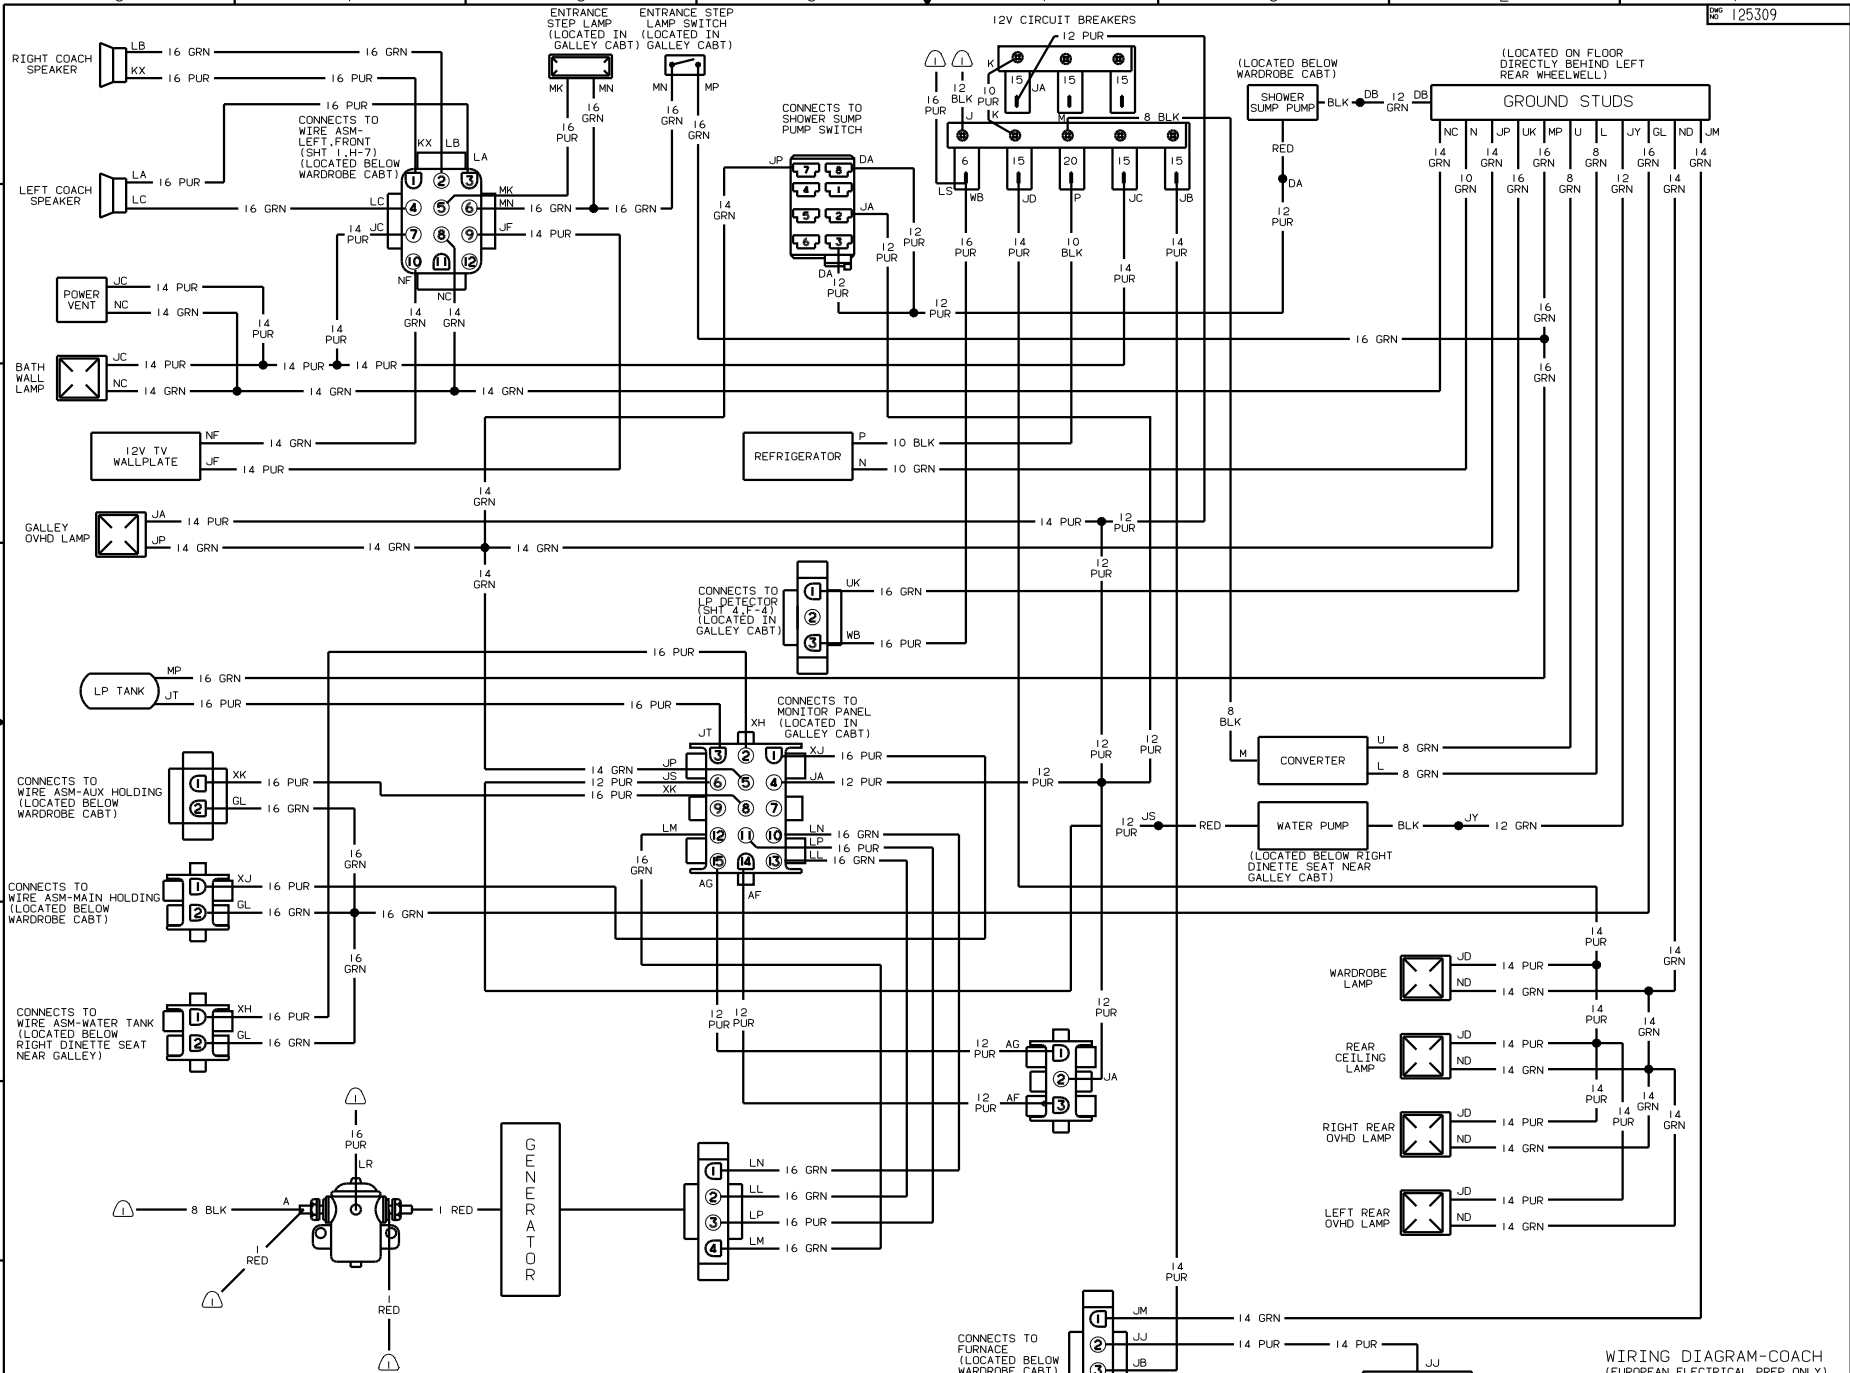


SEE SHT 1 FOR ADDITIONAL INFORMATION.


NOTES:

WIRING DIAGRAM-COACH  
(EUROPEAN ELECTRICAL PREP ONLY)  
(WIRE ASM 120021)


TITLE:	WIRING DIAGRAM-BODY
NO. OF SHEETS:	3 OF 6
REV:	1 E
DWG NO:	125309

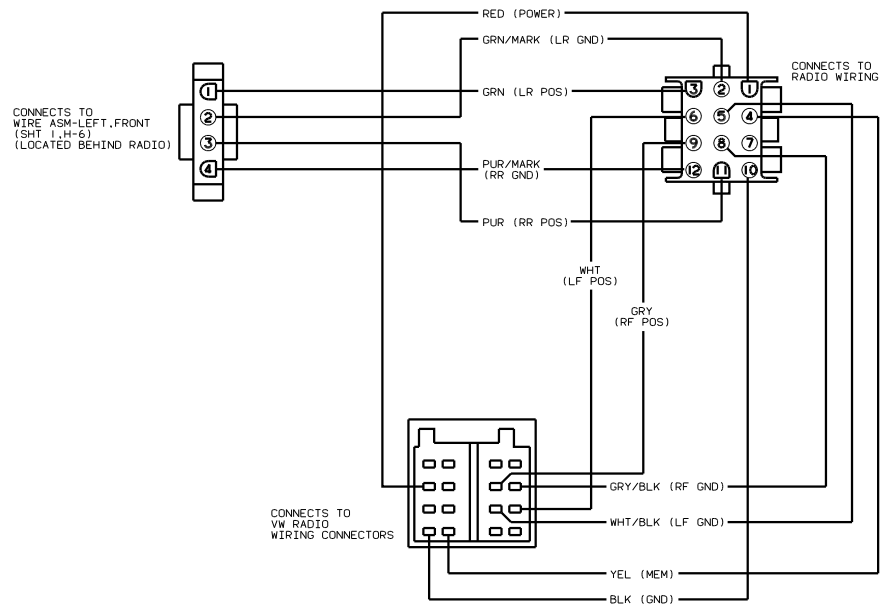


WIRING DIAGRAM-ADAPTER,RADIO  
(WIRE ASM 114365)

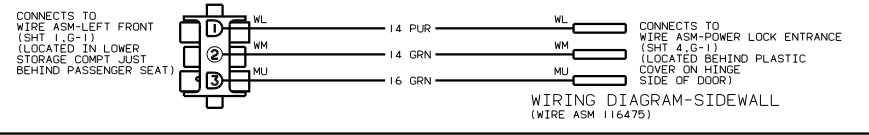


WIRING DIAGRAM-SIDEWALL  
(WIRE ASM 116475)

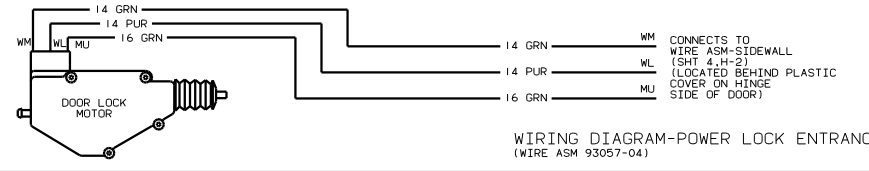


WIRING DIAGRAM-POWER LOCK ENTRANCE  
(WIRE ASM 93057-04)

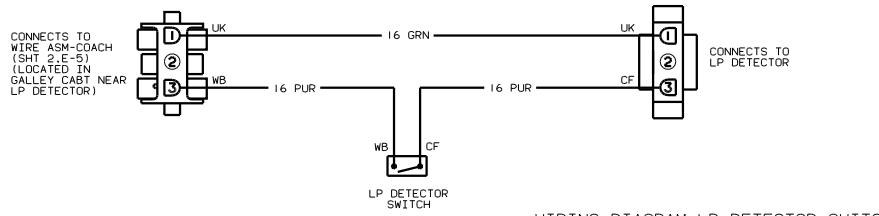


WIRING DIAGRAM-LP DETECTOR SWITCH  
(JAPANESE UNITS ONLY)  
(WIRE ASM 115733)

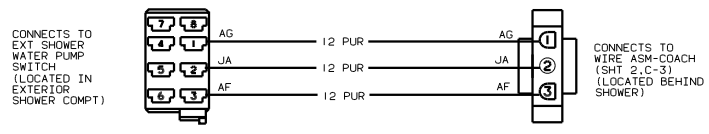


WIRING DIAGRAM WATER PUMP,SWITCH  
(WIRE ASM 103494-04)  
(WITH EXTERIOR SHOWER)

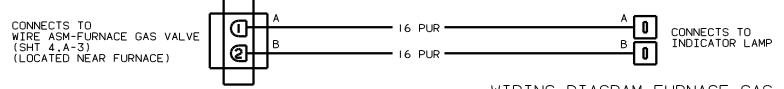

 
WIRING DIAGRAM-FURNACE GAS LIGHT  
(JAPANESE UNITS ONLY)  
(WIRE ASM 107574)




WIRING DIAGRAM-SIDEWALL  
(WIRE ASM 114745)

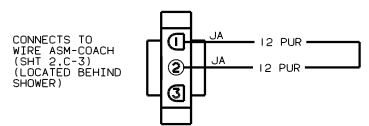

WIRING DIAGRAM-JUMPER  
(WIRE ASM 103493)  
(WITHOUT EXTERIOR SHOWER)

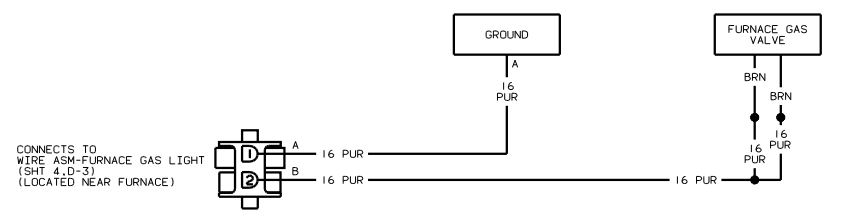


WIRING DIAGRAM-FURNACE GAS VALVE  
(JAPANESE UNITS ONLY)  
(WIRE ASM 107573)

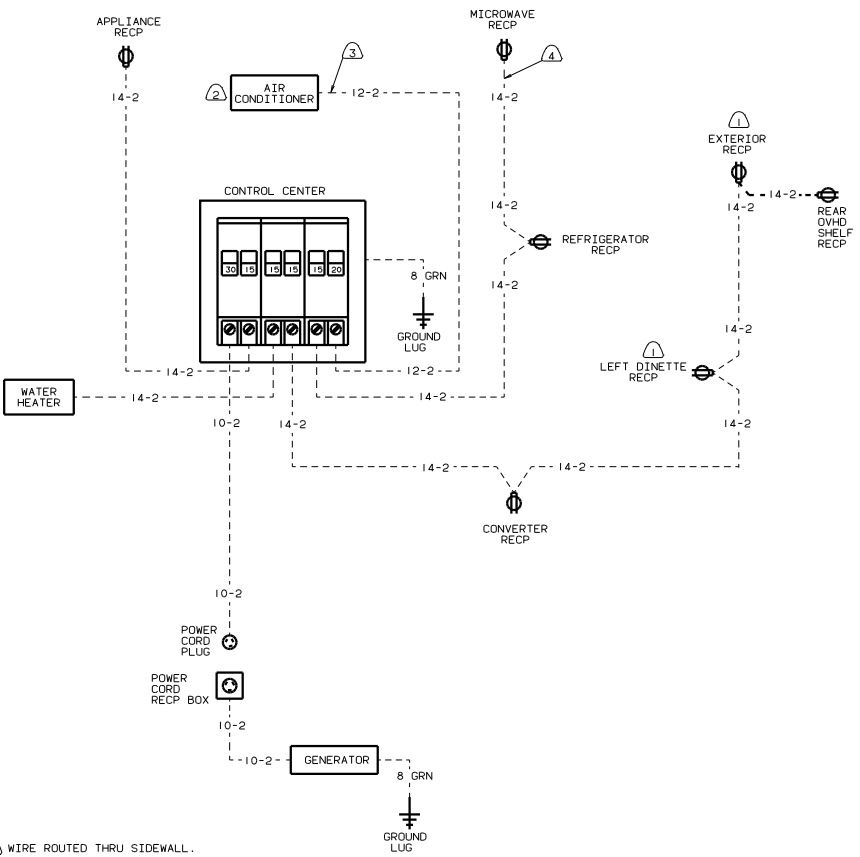


- ④ WIRE ROUTED THRU SIDEWALL.
- ③ WIRE ROUTED THRU ROOF.
- ② WITH AIR CONDITIONER.
- ① PROTECTED BY GFI RECP.

(CAN 110V WIRING)

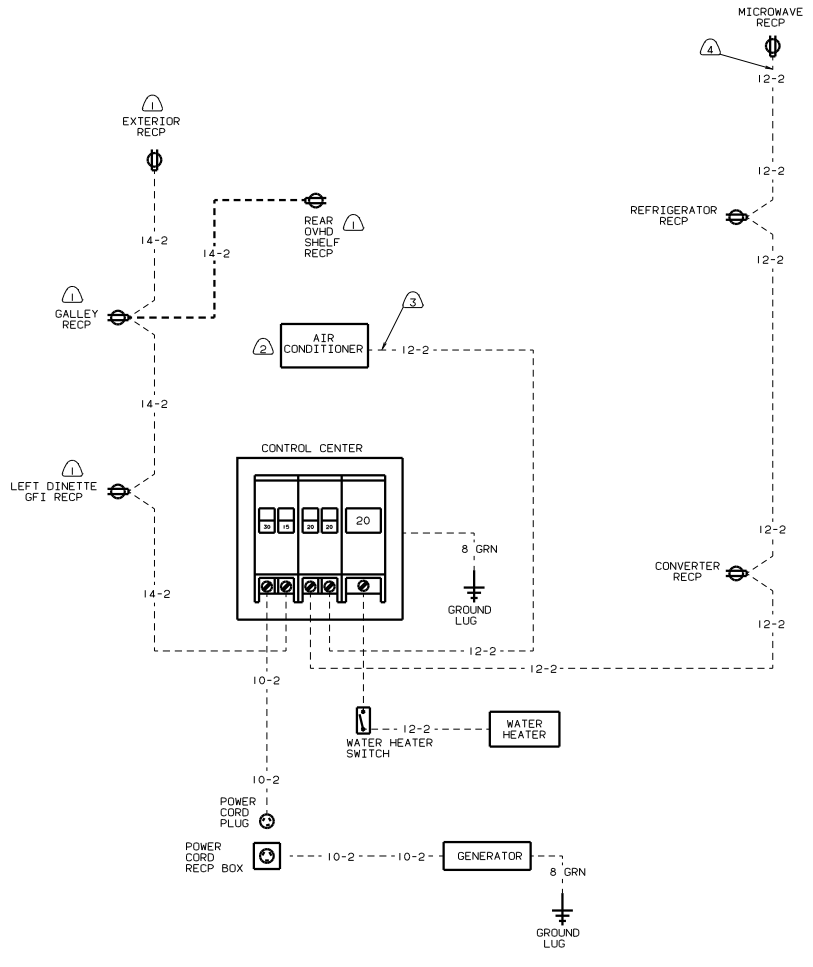


(US 110V WIRING)

TITLE: WIRING DIAGRAM-BODY	
30 DAY SCALE DRAWING	REV. NO.
SHEET 5 OF 6	125309

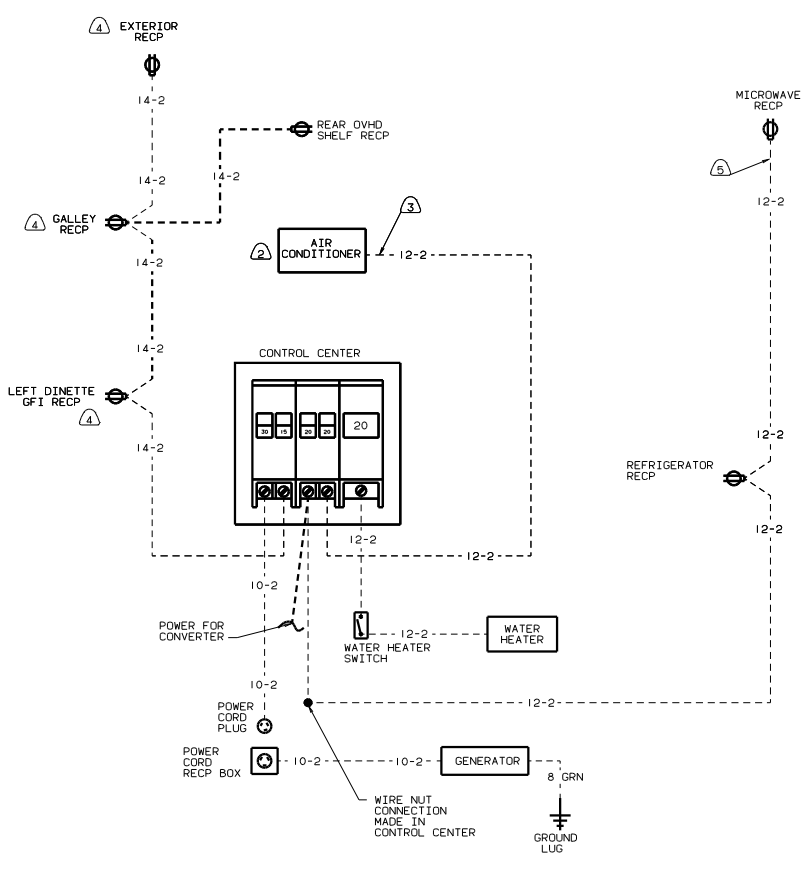

- ⑤ WIRE ROUTED THRU SIDEWALL.
- ④ PROTECTED BY GFI RECP.
- ③ WIRE ROUTED THRU ROOF.
- ② WITH AIR CONDITIONER.
- ① ALL CIRCUITS PROTECTED BY GFI MAIN BREAKER.

(JAPANESE 110V WIRING)

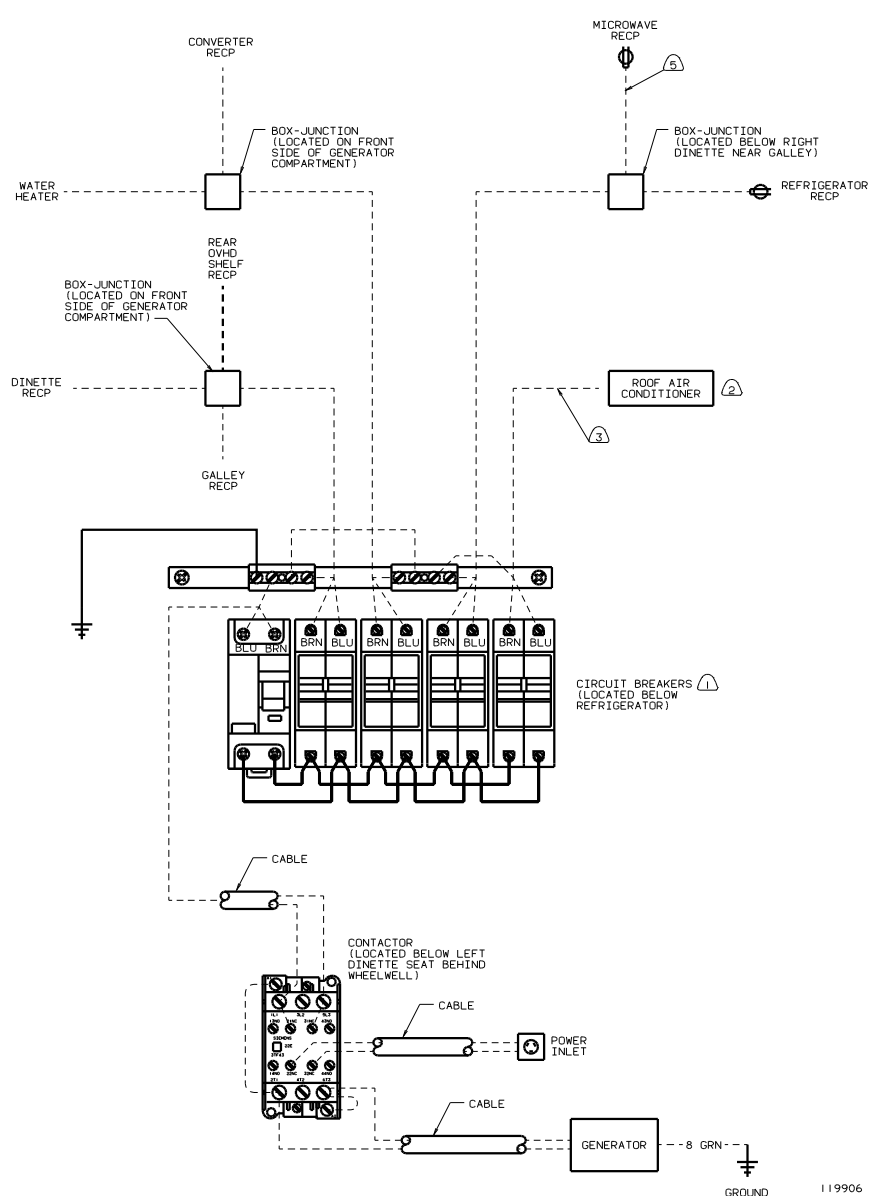

CIRCUIT BREAKERS (LOCATED BELOW REFRIGERATOR)

(220 VOLT WIRING)  
(EUROPEAN ELECTRICAL PREP UNITS)

TITLE		WIRING DIAGRAM-BODY	
NO. THIS SHEET CONTAINS	REV.	DATE	125309
SHEET 6 OF 6	1.E		