




DANGER


Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.




CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

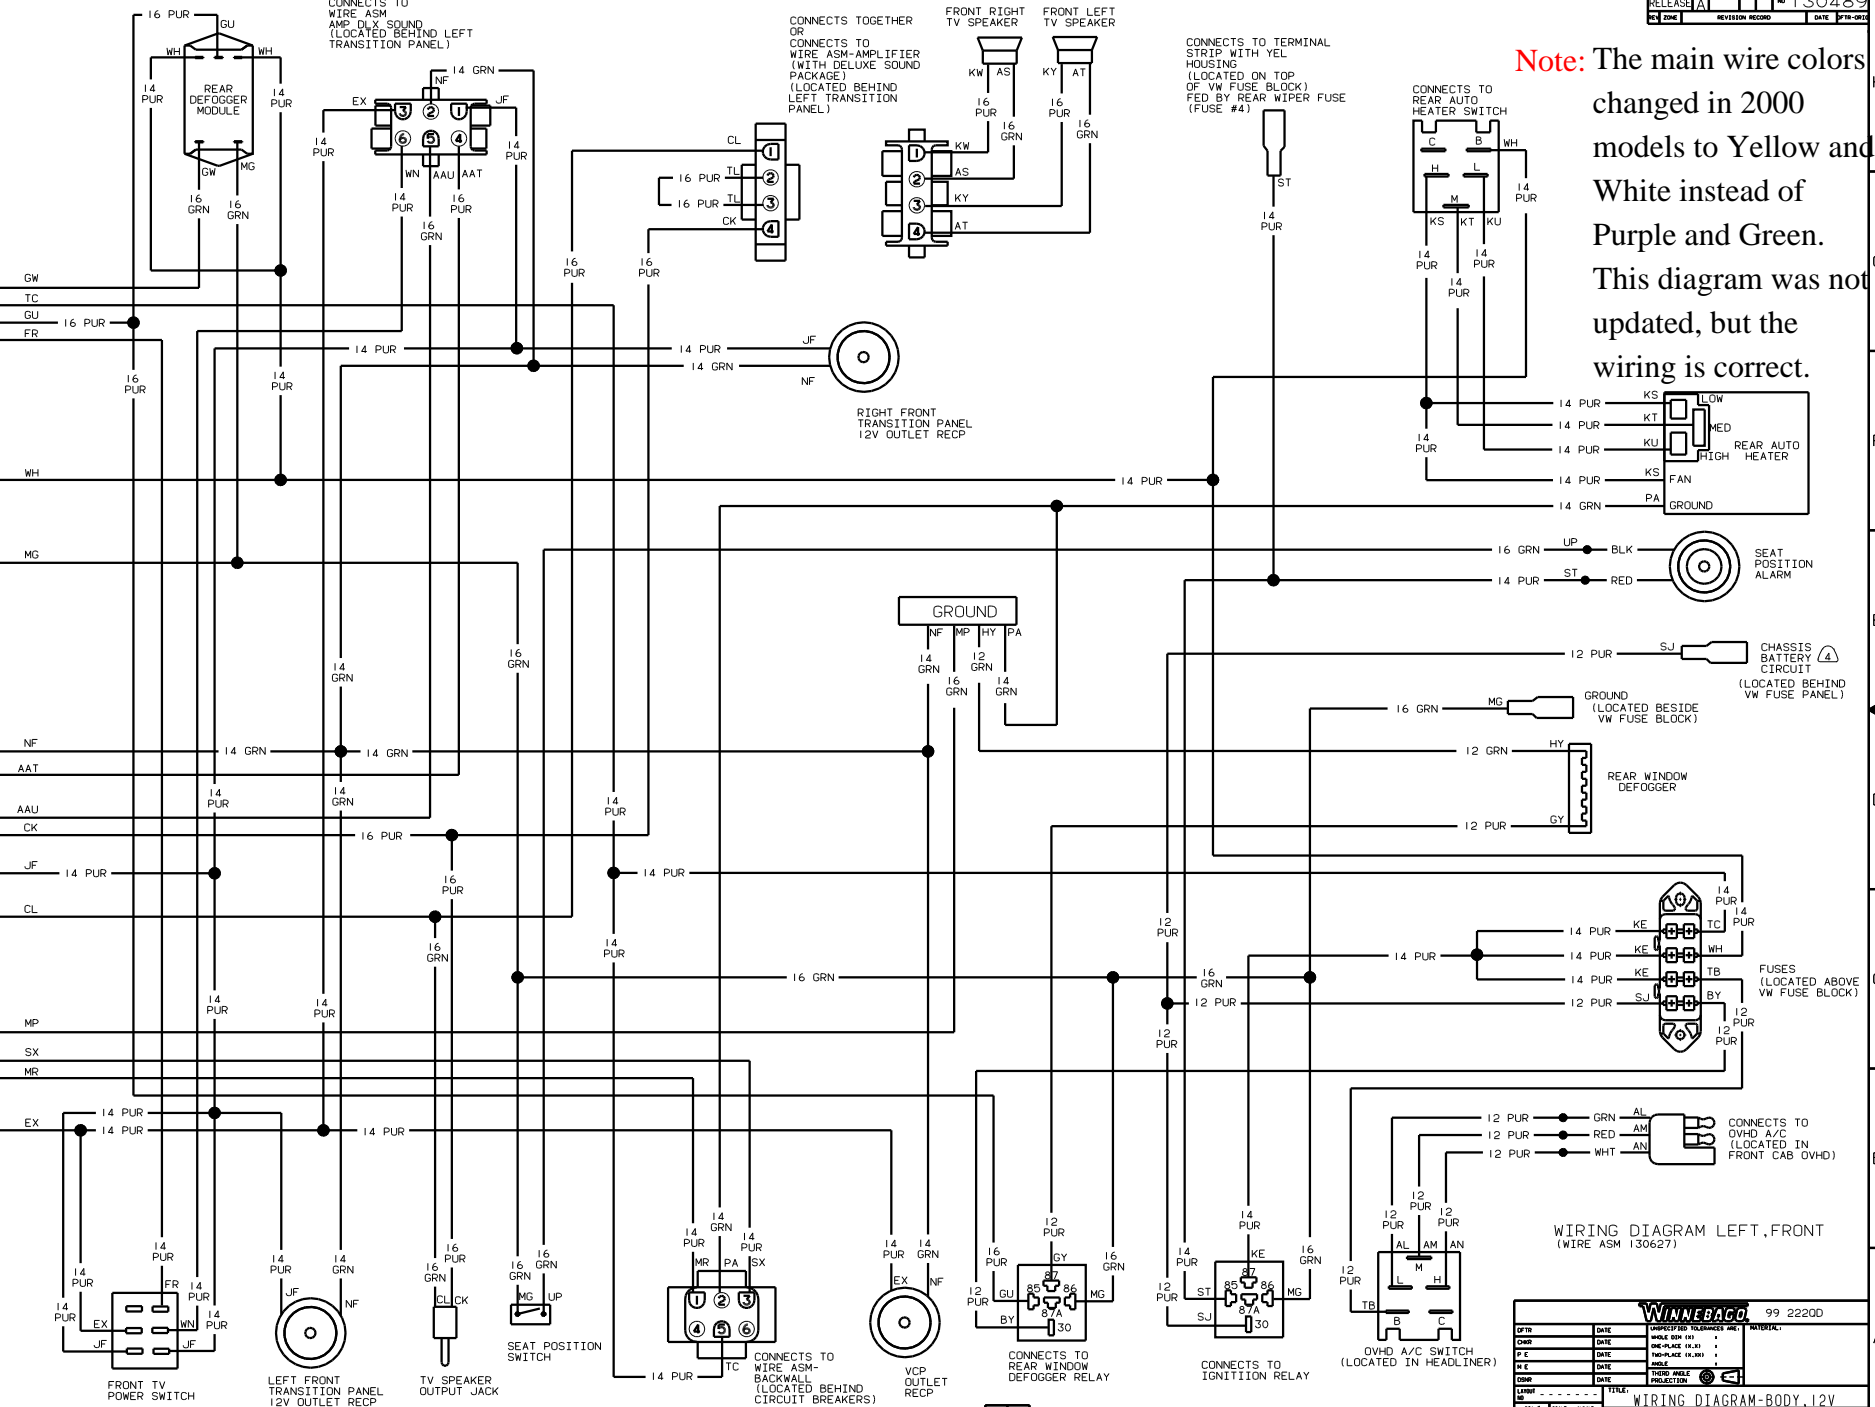

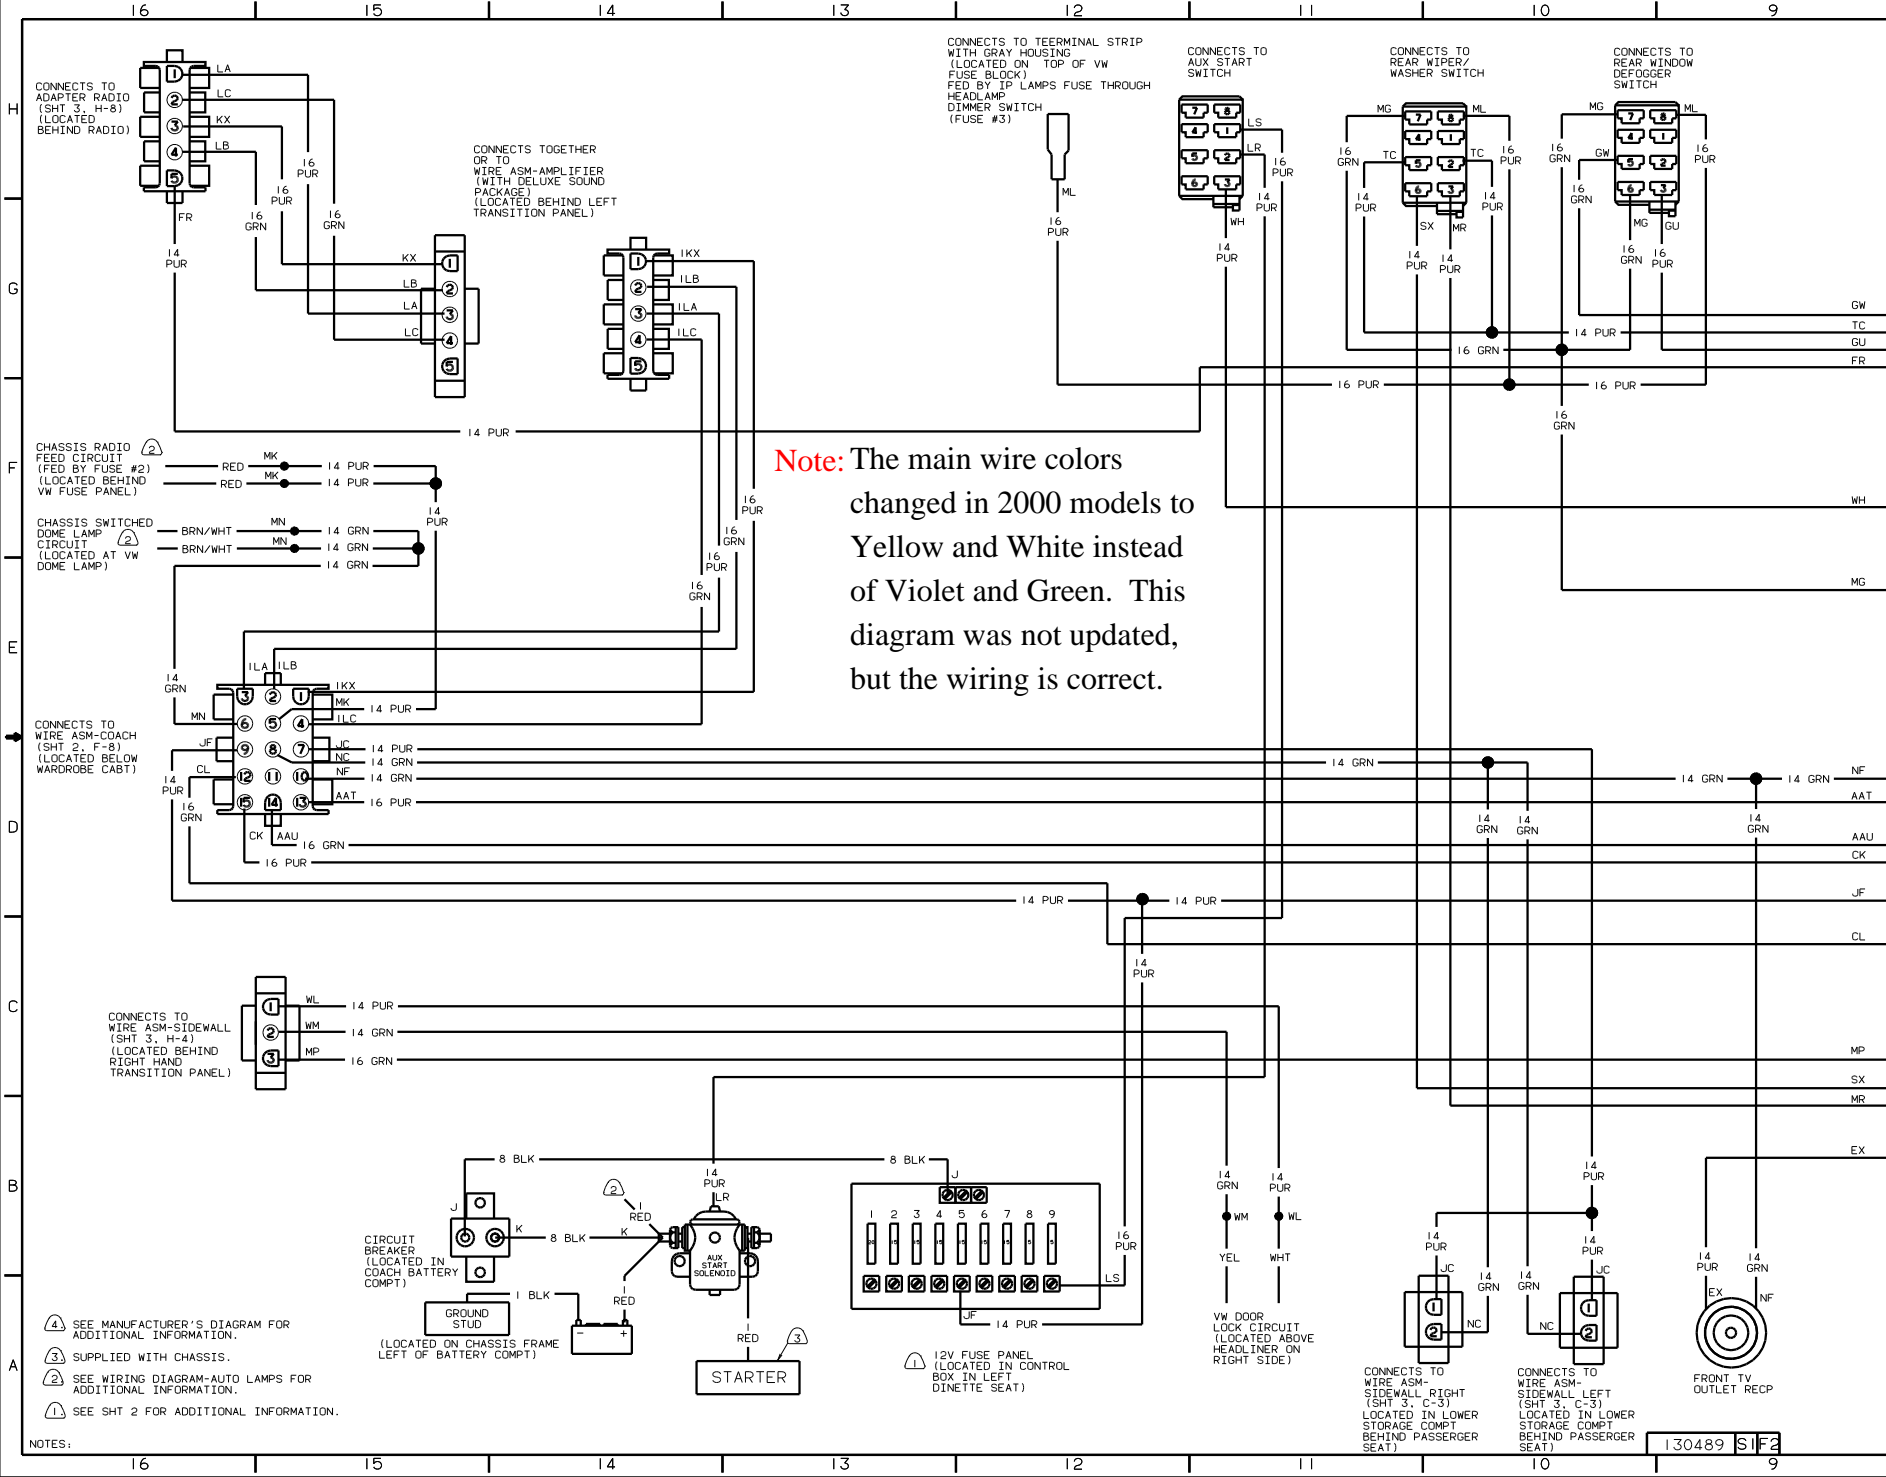

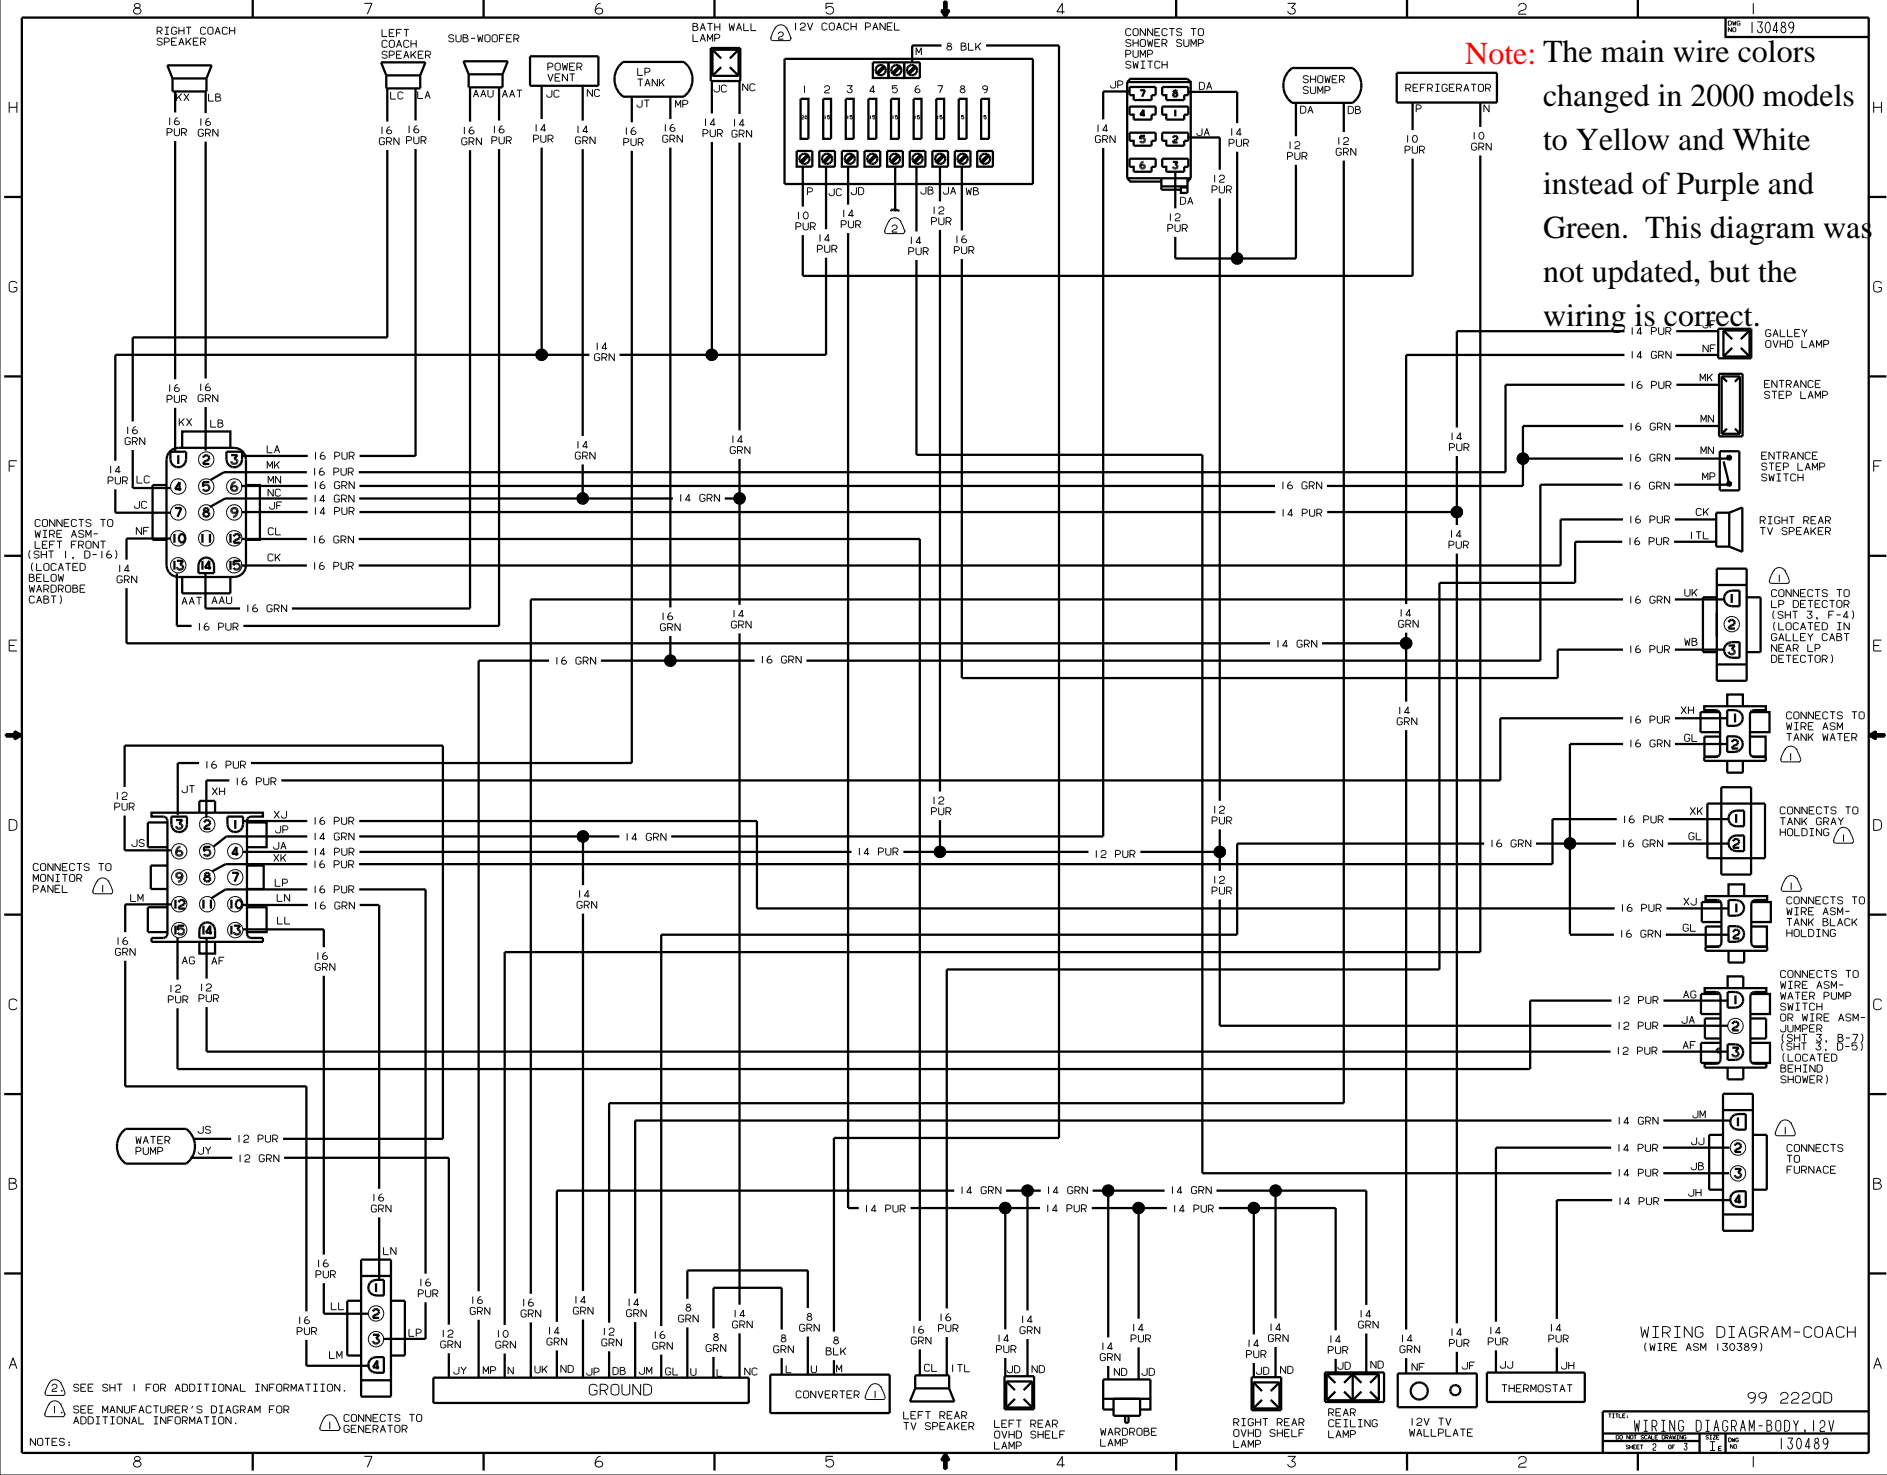

Note: The main wire colors changed in 2000 models to Yellow and White instead of Purple and Green. This diagram was not updated, but the wiring is correct.

NOTES:
② SEE SHT 1 FOR ADDITIONAL INFORMATION.
① SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.


CONNECTS TO GENERATOR

WIRING DIAGRAM-COACH
(WIRE ASM 130389)

99 2220D


TITLE	WIRING DIAGRAM-BODY 12V
DATE	10/18/84
REV	1
NO.	130489

CONNECTS TO
WIRE ASM-LEFT,FRONT
(SHT 1,H-16)
(LOCATED BEHIND RADIO)

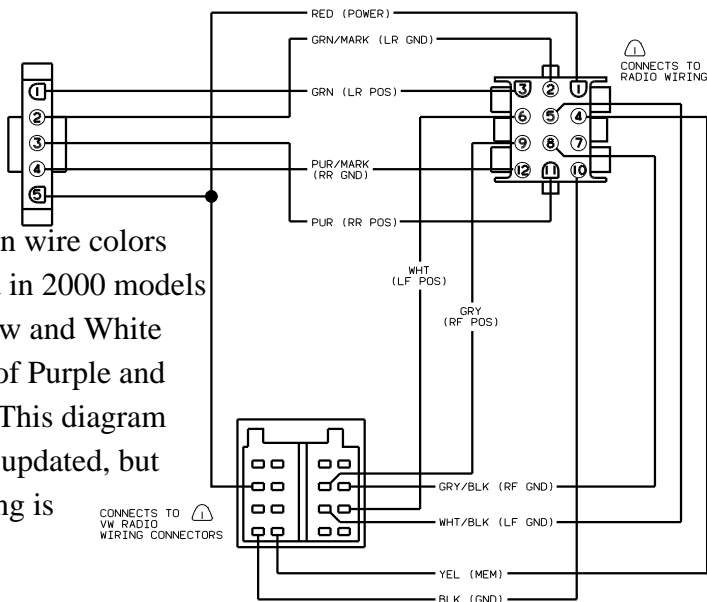


WIRING DIAGRAM-ADAPTER,RADIO
(WIRE ASM 114365-02)

 CONNECTS TO
EXT. SHOWER
WATER PUMP
SWITCH
(LOCATED IN
EXTERIOR
SHOWER COMPT)



WIRING DIAGRAM WATER PUMP,SWITCH
(WIRE ASM 103494-04)
(WITH EXTERIOR SHOWER)

 
CONNECTS TO
WIRE ASM-COACH
(SHT 2,C-1)
(LOCATED BEHIND
SHOWER)




WIRING DIAGRAM-JUMPER
(WIRE ASM 103493)
(WITHOUT EXTERIOR SHOWER)

SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.

 CONNECTS TO
WIRE ASM-LEFT FRONT
(SHT 1,C-16)
(LOCATED IN LOWER
STORAGE COMPT JUST
BEHIND PASSENGER SEAT)




WIRING DIAGRAM-SIDEWALL
(WIRE ASM 116475)

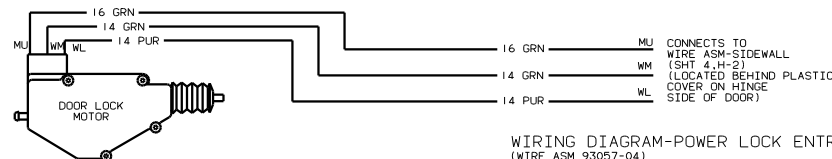


WIRING DIAGRAM-POWER LOCK ENTRANCE
(WIRE ASM 93057-04)

CONNECTS TO
WIRE ASM-COACH
(SHT 2,E-1)
(LOCATED IN
GALLEY CABT NEAR
LP DETECTOR)

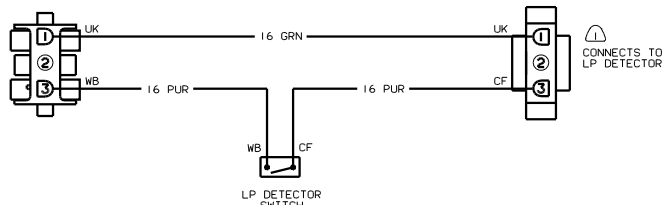

WIRING DIAGRAM-LP DETECTOR SWITCH
(JAPANESE UNITS ONLY)
(WIRE ASM 115733)

 CONNECTS TO
WIRE ASM-FURNACE GAS VALVE
(SHT 4,A-3)
(LOCATED NEAR FURNACE)




WIRING DIAGRAM-FURNACE GAS LIGHT
(JAPANESE UNITS ONLY)
(WIRE ASM 107574)

CONNECTS TO
WIRE ASM-LEFT,FRONT
(SHT 1,A-10, A-10)
(LOCATED IN LOWER
STORAGE COMPT BEHIND
PASSENGER'S SEAT)



WIRING DIAGRAM-SIDEWALL
(WIRE ASM 114745)

 CONNECTS TO
WIRE ASM-FURNACE GAS LIGHT
(SHT 4,D-3)
(LOCATED NEAR FURNACE)



WIRING DIAGRAM-FURNACE GAS VALVE
(JAPANESE UNITS ONLY)
(WIRE ASM 107573)

99 222QD

WIRING DIAGRAM-BODY
130489