
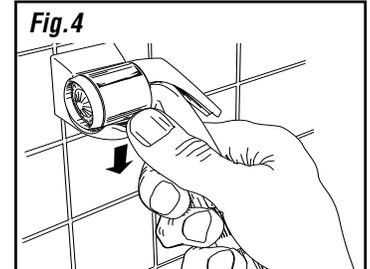
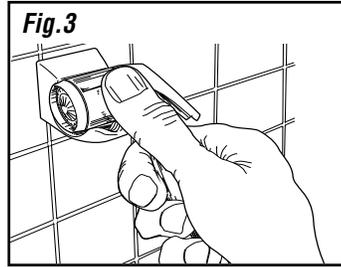
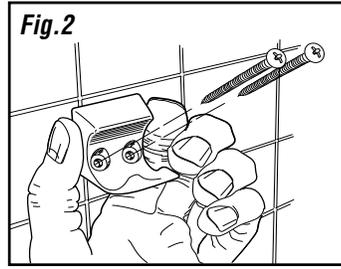


Aqua-Magic® Galaxy®/Starlite® Water Saver Kit

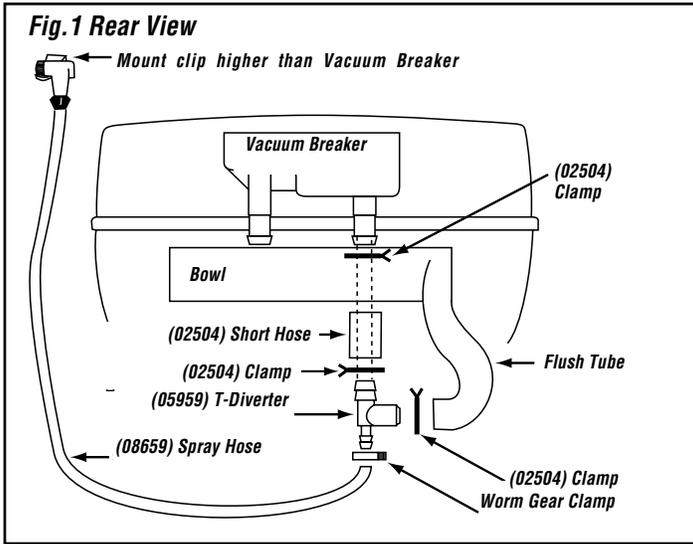

Notes – Read all instructions first. DO NOT substitute worm-drive (screw-type) clamps for provided (spring) Clamps.

1. Remove toilet from floor (see Owner's Manual). Turn over.
2. Remove Flush Tube from Vacuum Breaker by loosening clamp and pulling bottom of Tube free.
(**Caution** – Do not move Flush Tube where it meets bowl. This could cause a leak!)
3. Insert larger barb end of T-Diverter (05959) into enclosed Short Hose (20774) and secure with Clamp (02504).
4. Push open end of Short Hose (20774) over barb of Vacuum Breaker until boss of T-Diverter goes into Vacuum Breaker.
5. Secure hose to Vacuum Breaker with another Clamp (02504).
6. Place Worm Gear Clamp (09970) on Spray Hose (08659). Insert hose onto smaller barb end of T-Diverter (05959). Secure with Clamp (09970).
7. Place Clamp (02504) onto Flush Tube and insert smooth end of T-Diverter into Flush Tube. Secure with Clamp (02504).
8. Select mounting location for Clip (must be above toilet to avoid drips). Holding Clip firmly against wall, use Clip as a drill guide. Drill pilot screw holes with 1/16" drill (Fig. 2).
9. Use provided screws to mount Clip.
10. Snap chrome band of Water Saver nozzle into Clip (Fig. 3). To remove Water Saver, lightly press down on thumb tab (Fig. 4).

Using Water Saver:

1. Hold hand spray in ready position over Bowl.
2. Depress Thumb Button. This prepares for blast of water used to clean Bowl.
3. Step on Foot Pedal. This dumps contents of Bowl (and sends fresh water through hand spray).
4. Spray Bowl clean.
5. Release Foot Pedal. This shuts off all flushing water flow.

Note – If Thumb Button is released before Foot Pedal is released, water will automatically begin to flow through rim of Bowl.

To winterize Hand Spray: Depress Thumb Button and hold below rim level to drain.